Ritter®

Installation Instructions

Installation Instructions for 9A110 Bulk Storage Cabinet Accessory on the Models 106 and 306 Tables

Installation:

NOTE
The Bulk Storage Cabinet (1, Figure 1) is mounted behind the paper roll holder (2). The cabinet can be located on the table (3) so that the doors (4) hinge open toward the center of the table or toward the foot end (A) of the table.

1. Raise the table (3) so that it is between 8 inches (20.3 cm) and 12 inches (30.5 cm) above its lowest height.

NOTE
Use two 2" x 4" wood blocks 24 inches long to support the Bulk Storage Cabinet during installation.

2. Place two 2" x 4" wood blocks (5) on edge beneath the foot end (A) of the table to assist in supporting and holding the Storage Cabinet level during installation.

NOTE
There are four pre-drilled holes located beneath the table top on the foot-end of the table for mounting the 9A110 Bulk Storage Cabinet.

3. Place the Bulk Storage Cabinet (1) in position on the wood blocks (5) beneath the foot end (A) of the table.

4. Lower the table (3) until the table top is within 1/2 inch (1.3 cm) of the top of the Bulk Storage Cabinet (1).

5. Open the cabinet doors (4) and align the mounting holes in the top of the Bulk Storage Cabinet (1) with the four pre-drilled holes in the bottom of the table (3).

6. Place the flat washers (6) on the self tapping bolts (7) and insert the bolts (7) thru the top of the Bulk Storage Cabinet (1) into the pre-drilled holes in the table. Tighten the bolts (7) to 75 to 85 inch / lbs. (8.5 to 9.6 N•M).

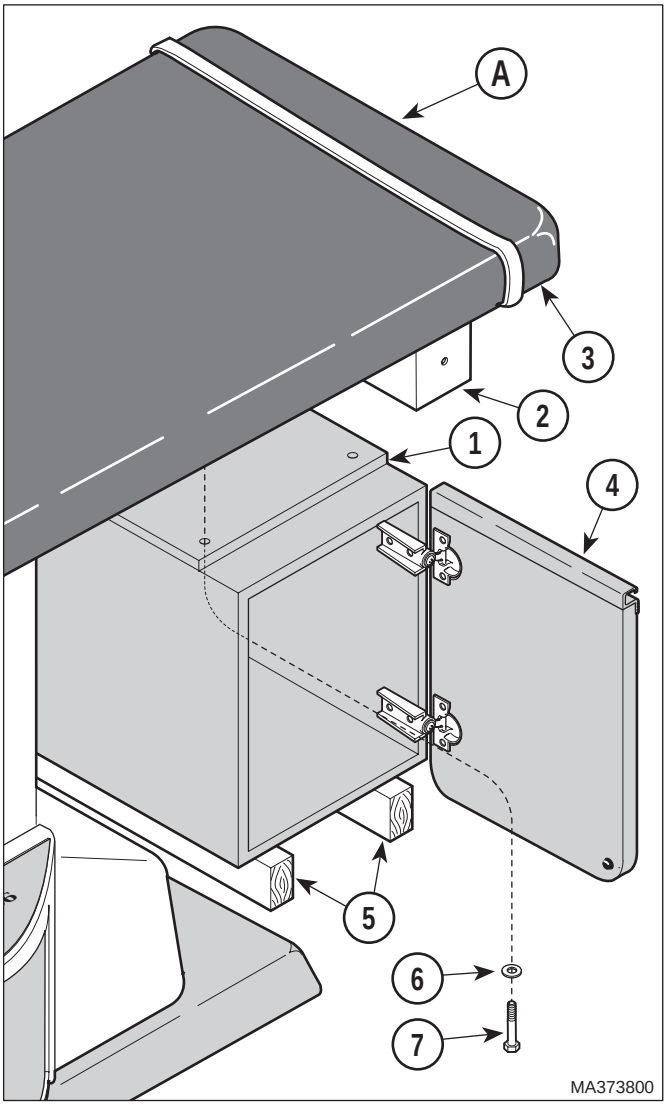

FIGURE 1

© Midmark Corporation - 1997

Ritter®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 TELEX 288007 FAX 937-526-5542

003-0466-00 Rev. B (4/97)